

---


## CHAPTER 1

# Administrator Password Setup

---

### 1.1 Introduction

In the **Basic Setup** group, you can change the administrator password, IP configuration of LAN interface, local DHCP server, ISDN and Wireless LAN configuration. In this chapter, we focus on the explanation of the **Administrator Password Setup**

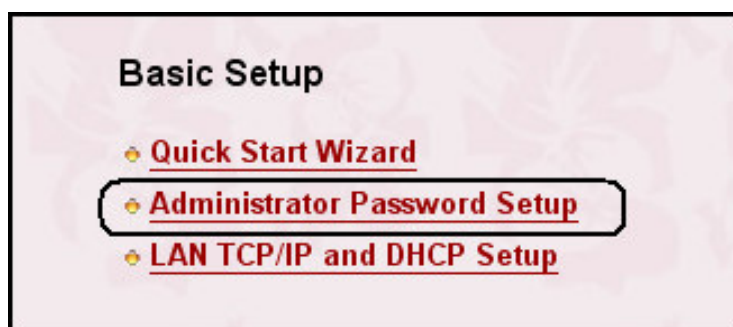


### 1.2 Changing the Administrator Password

For security reason, we strongly recommend that you should set an administrator password for the router. On the first setup, the router requires no password. If you don't set a password, the router is free from any user in the local network or the Internet and, obviously, the user can log into the router and change the settings.

Click **Administrator Password Setup**, the following screen will open.

## *Administrator Password Setup*

---



The screenshot shows a dialog box titled "Basic Setup > Administrator Password Setup". It contains three text input fields with labels: "Old Password", "New Password", and "Retype New Password". Each label is followed by a colon and a small square icon. Below the fields is an "OK" button. At the bottom of the dialog, there is a dark red footer bar with the text "Copyright (c) 2004, DrayTek Corp. All Rights Reserved."

**Old Password:** Enter a current administrator password. If this is the first time to set a password, leave this field empty.

**New Password:** Enter a new administrator password.

**Retype New Password:** Type the new password again for confirmation.

Click **OK**.